

Ernesto Müller

Telas para peneiras e filtros em aço inoxidável e galvanizado.



Rua Pres. Roosevelt, 1352 São Leopoldo - RS



51 3592 1352



www.ernestomuller.com.br



@telasmuller




51 98408 1352

Inoxidáveis (AISI 304)

Malha	Fio m/m	BWG	Abertura m/m
4 1/2	0,70	-	4,94
7	0,60	-	3,03
10	0,50	-	2,04
14	0,30	-	1,51
18	0,30	-	1,11
18	0,38	-	1,03
20	0,25	-	1,02
20	0,30	-	0,97
24	0,30	-	0,76
30	0,20	-	0,65
30	0,23	-	0,62
30	0,30	-	0,55
35	0,23	-	0,50
40	0,20	-	0,44
40	0,23	-	0,41
50	0,18	-	0,33
60	0,15	-	0,273
80	0,12	-	0,198
100	0,10	-	0,154
120	0,08	-	0,131
150	0,08	-	0,089
200	0,05	-	0,077
300	0,035	-	0,050

Como medir

Malha é o número de aberturas por polegada linear medida de centro a centro dos arames.

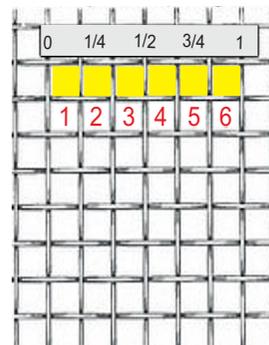

Exemplo de malha 6



1952 - 2017